

**Kodak**

 
 
# EasyShare P750/P850

Digital Frame • 数码相框



Quick Reference  
快速参考

## Copy pictures to your frame

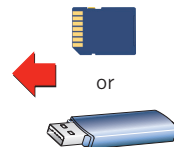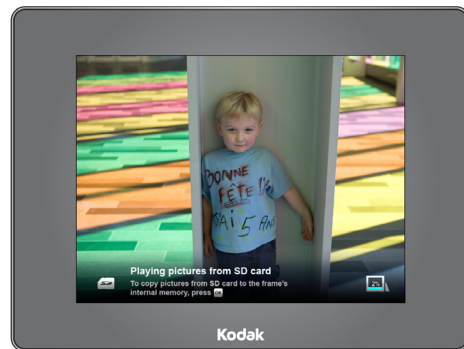

- 3** To copy pictures from your card or USB device to the frame's internal memory, press OK.
- Copy up to 16,000 pictures.
  - Slide show plays while copying.
  - To cancel copying, press Back.

**NOTE:** If frame turns on or off at unexpected times, the activity sensor may still be adjusting to your home environment. For details, see the Extended user guide.

## Main control panel



**Play/Pause:** Start or resume a slide show.



**Pictures:** Play all, play by date, folders, keywords, people, favorites. (Icon = current picture source.)



**Copy:** Copy pictures to the frame (only when a memory card or USB device is inserted).



**Delete:** Delete pictures from the frame (only when a memory card or USB device is not inserted.)



**Picture Finder:** Play pictures taken on the same day as the picture on screen.



**Transitions:** Choose frame transition style between pictures and how long pictures are displayed.

 


**Set Mode:** Choose default settings for the viewing modes—collage, clock, and calendar.



**Settings:** Choose frame settings such as rotate, time/date, auto on/off, **energy-saving activity sensor**, background image, enhancements, brightness, play order, language.

## Overview

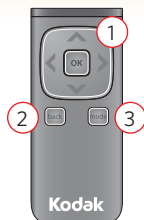

Remote Control

### ① Navigation/OK buttons

- ◀ Left and Previous
- ▶ Right and Next
- ▲ Up
- ▼ Down
- OK Accept

### ② Back button

### ③ Mode button

### ④ Power button

 
### ⑤ Memory card slot

SD, SDHC, MMC, MS, MS Pro, xD


### ⑥ USB port to flash drive, etc.

### ⑦ USB port to computer

Purchase USB cables separately.

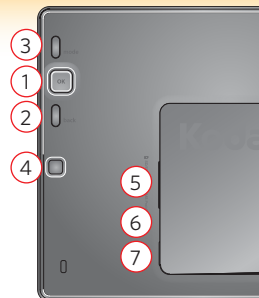

## 将照片复制到相框

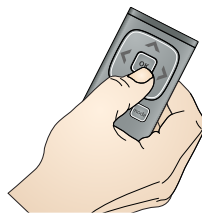 


**3** 要将照片从存储卡或 USB 设备复制到相框的内存，请按 OK（确定）。

- 最多可复制 16000 张照片。
- 在复制期间可播放幻灯片。
- 要取消复制，按 Back（后退）。

注：如果相框在意外时间开机或关机，则活动传感器可能仍然会调整为适应您的室内环境。有关详情，请参阅补充用户指南。

# 主控面板

 

**播放/暂停**: 开始或恢复播放幻灯片。

**照片**: 播放全部, 按文件夹、关键字、人物、收藏播放。  
(图标 = 当前照片来源。)

**复制**: 将照片复制到相框  
(仅当插入了存储卡或 USB 设备时)。

**删除**: 从相框中删除照片  
(仅当未插入存储卡或 USB 设备时)。

**照片查找工具**: 播放与屏幕上显示的照片在同一天拍摄的其它照片。

**过渡方式**: 选择照片之间的过渡方式以及照片的显示时间长度。

**设置模式**: 选择查看模式的默认设置 — 拼贴画、时钟和日历。

**设置**: 选择相框设置, 例如旋转、时间/日期、自动开启/关闭、**节能型活动传感器**、背景影像、增强、亮度、播放顺序、语言。

## 概述



① **导航/OK (确定) 按钮**  
 ◀ 向左和上一个  
 ▶ 向右和下一个  
 ▲ 向上  
 ▼ 向下  
 OK (确定) 接受

② **Back (后退) 按钮**

 
③ **Mode (模式) 按钮**

④ **电源按钮**

⑤ **存储卡插槽**  
 SD、SDHC、MMC、MS、MS Pro、xD

⑥ **用于连接闪存盘等设备的 USB 端口。**

⑦ **用于连接计算机的 USB 端口**  
 USB 电缆需另购。

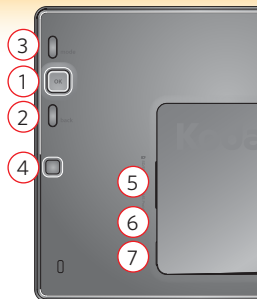

Australian C-Tick



China RoHs

Product Disclosure Table  
KODAK Digital Picture Frames  
有毒有害物质或元素名称及含量标识表  
table of hazardous substances' name and concentration

部件名称 Component name	有毒有害物质或元素 hazardous substances' name					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
交流适配器电路和元件 AC Adapter circuit board components	X	○	○	○	○	○
数码相机电路和元件 Digital Photo Frame circuit board components	X	○	○	○	○	○
数码相机外壳 Digital Photo Frame Enclosure	○	○	○	○	○	○
○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。 ○： indicates hazardous substance concentration lower than MCV ×： indicates hazardous substance concentration higher than MCV						

Kodak

EASTMAN KODAK COMPANY  
Rochester, NY 14650 U.S.A.

© Kodak, 2010. MC/MR/TM: Kodak, EasyShare.  
Printed in China. 4H7106  
www.kodak.com